### AHS SECURITY SYSTEMS QUICK REFERENCE INSTRUCTION MANUAL

Zone 1	Description	Туре
2		
<u>3</u>		
5		
<u> </u>		
8		

### **ARMING & DISARMING**

To Arm System in **Stay** mode, press **and hold** the **STAY** button. (motion detector(s) will be bypassed) To Arm System in **Away** mode, press **and hold** the **AWAY** button. (motion detector(s) will be on)

To Disarm System, enter your 4-digit user code.

## **MASTER & USER CODES**

To Change Master Code:

(current master code)

To Add Additional User Codes:

\* (master code) \_\_ (0 1) (Thru (3 (2)) You may add up to 32 user codes, but only the master code may enter into programming!

To **Delete** a User Code:

(master code)

\_\_ (0 1 (Thru (3 2)) \* #

 
### **BYPASSING**

To Bypass a zone

Press





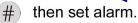

#### TROUBLE



Service Required -call AHS (usually a low battery. Recommend replacement every 3 to 5 years.)

Loss of AC power (possibly due to power outage, breaker tripped or transformer unplugged)

Telephone Line Trouble

Panel has failed to communicate with the Central Station

Zone Fault

Zone Tamper

Low Zone Battery (for wireless products only!), press 7 to view which wireless zone needs battery replaced.

Loss of time on system clock

# **MEMORY**



To View Memory, press \* 3 The zone that tripped the alarm will be displayed.

To Clear Memory, arm your system.



# **OPEN ZONES**

Press the < > keys to view "open" zones.

Close all zones to get green system "Ready" light. (see zone listing above)

Now you can arm the system.

### SETTING THE CLOCK

To Set the Clock:

(master code)

(24-hour format) H H : M M

then

MM/DD/YY#

# CENTRAL STATION MONITORING

If alarm sounds, enter your code to turn off alarm. If your system is monitored, please alert the central station to any false alarms.

Crime Alert Central Station: 1-800-367-1091



# **Arvin Home Systems** 334-A North Main Street Manteca, California 95336 (209) 823-3565