AHS SECURITY SYSTEMS QUICK REFERENCE INSTRUCTION MANUAL

Zone	Description	Type
$\frac{1}{2}$		
3		
4	9 -	
5	M	
6		

ARMING & DISARMING

To Arm System in **Stay** mode, press **and hold** the **STAY** button. (motion detector(s) will be bypassed)

To Arm System in **Away** mode, press **and hold** the **AWAY** button. (motion detector(s) will be on)

To Disarm System, enter your 4-digit user code.

MASTER & USER CODES

To Change Master Code:

* 5 (current master code) 4 0 (new master code) #

To Add Additional User Codes:

* 5 __(master code) __ 0 1 (Thru 3 2) __(new code) __ #
You may add up to 32 user codes, but only the master code may enter into programming!

To Delete a User Code:

* 5 __(master code) __ 0 1 (Thru 3 2) * #

BYPASSING

To Bypass a zone

Press * 1 (2-digit zone) # then set alarm.

TROUBLE

To view Trouble Condition, press * 2

The small number on top of the screen will correspond with the table below:


- Service Required -call AHS (usually a low battery. Recommend replacement every 3 to 5 years.)
- 2 Loss of AC power (possibly due to power outage, breaker tripped or transformer unplugged)
- 3 Telephone Line Trouble
- 4 Panel has failed to communicate with the Central Station
- 5 Zone Fault
- 6 Zone Tamper
- 7 Low Zone Battery (for wireless products only!), press 7 to view which wireless zone needs battery replaced.
- 8 Loss of time on system clock

MEMORY

To View Memory, press * 3

The zone that tripped the alarm will be displayed.

To Clear Memory, arm your system.

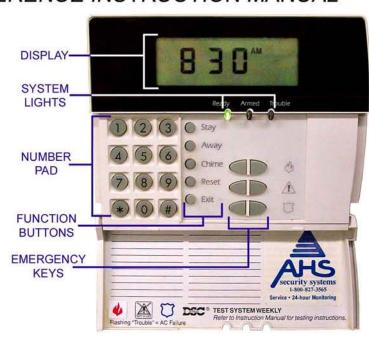

OPEN ZONES

Press the # key to view "open" zones.

Close all zones to get green system "Ready" light.

(see zone listing above)
Now you can arm the system.

SETTING THE CLOCK

To Set the Clock:

CK: (24-hour format)

6 __(master code)

1 <u>H H : M M</u>

then

<u>M M / D D / Y Y</u> #

(NOTE: Wait up to five minutes for the clock to adjust!)

CENTRAL STATION MONITORING

If alarm sounds, enter your code to turn off alarm.
If your system is monitored, please alert the
central station to any false alarms.

Crime Alert Central Station: 1-800-367-1091



Arvin Home Systems 334-A North Main Street Manteca, California 95336 (209) 823-3565

www.arvinhomesystems.com